



Odd Ball Industries Mfg. Co., Inc.
PO Box 376 · Greenlawn, NY 11740
Ph: (631) 754-0400 / Fx: (631) 925-5347
www.oddballindustries.com


Installation of SP-6 Clothes/Towel Hook

Warning: This product is ligature-resistant only when properly installed. A loosened fixture can easily be tied to. Any product which can be removed can be used as a weapon!

Note: Installation at 6' height or greater is recommended to preclude possibility of injury from the protruding hook.

Front Mount Directions:

1. Refer to the diagram below for mounting hole locations. Use wall anchors as appropriate to ensure a structurally sound attachment. Secure to the wall using 1/4-20 flat head fasteners¹ through the mounting holes in the flanges. (Fasteners not included.)

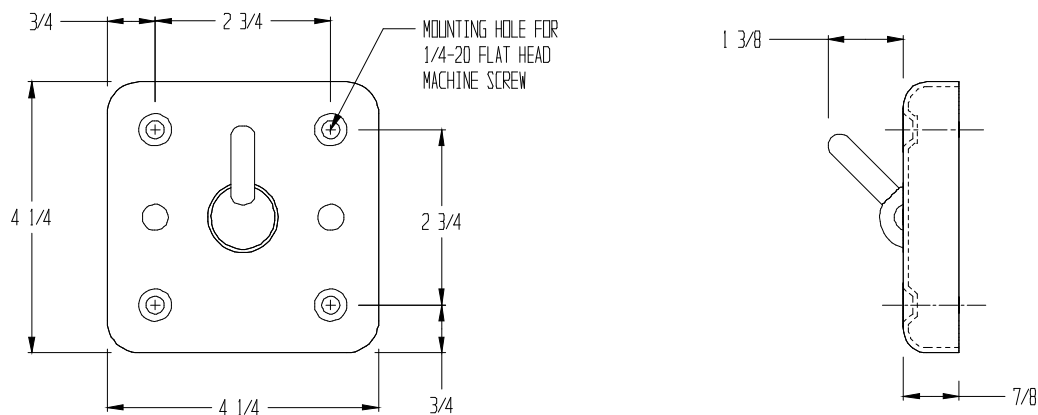

2. Verify that the clothes/towel hook cannot be loosened or removed. Fill any gaps between the wall and the flange with a security sealant (such as Pecora Dynapoxy EP-1200).

¹ Tamper proof fasteners are strongly recommended. The selection of a particular size and type of tamper proof fastener should be made in conjunction with a facility manager, because it depends upon factors such as construction materials and institutional standards.